



### Assembly and Installation Instructions

Please read and save these instructions for future reference. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Upon receiving the product, check for any damage that may have occurred during transit and report it immediately to the shipper. Also verify that all accessory items are accounted for.

#### STEP 1: Unpack and Inspect Parts

ERW-E						
Part Description	Quantity	ERW-E1	ERW-E2	ERW-E3	ERW-E4	ERW-E5
		Part #				
<b>Roof Curb Kit</b>						
1. 14-inch	1	898531	898453	898456	898459	898462
2. 18-inch	1	898532	898454	898457	898460	898463
3. 24-inch	1	898533	898455	898458	898461	898464
<b>End Channel</b>						
1. 14-inch	2	757131	753874	753888	753940	753954
2. 18-inch	2	757133	753884	753900	753949	753960
3. 24-inch	2	757135	753886	753901	753951	753962
<b>Side Channel</b>						
1. 14-inch	2	757132	753875	753889	753941	753955
2. 18-inch	2	757134	753885	753901	753950	753961
3. 24-inch	2	757136	753887	753937	753952	753963
<b>Center Channel</b>	1	757310	753876	753890	753942	753956
<b>End Support</b>	1	757311	753877	753891	753943	753957
<b>Insulation Pan</b>	2	---	753878	753892	753944	753958
<b>Duct Adaptor</b>	1	757309	753879	753893	753945	753959
<b>Hardware Kit</b>	1	852902	852902	852902	852902	852902
Screws, SMS (A) 12 x 0.625 (IHH)	36	415180	415180	415180	415180	415180

## STEP 2: Assemble Main Curb for Model ERW-E

**Instructions:**

- See **ERW-E final Curb Assembly** for the correct hardware.
- Align the holes and fasten as shown below.

### Hardware Required:

(24) Screws, SMS (A) 12 x 0.625 (IHH)

(2) End Channels


(1) Center Channel

(2) Side Channels

(1) End Support

### SPECIAL TOOLS REQUIRED

- Cordless drill
- 5/16 in. Nut setter
- Awl — for hole alignment

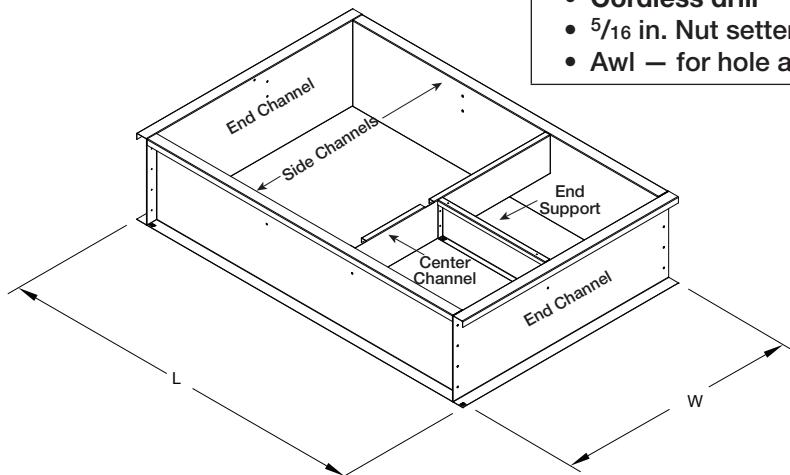

### Overall Curb Dimensions for Model ERW-E

	ERW-1	ERW-E2	ERW-E3	ERW-E4	ERW-E5
W	30.31	40.353	48.478	55.478	65.416
L	42.68	61.103	63.353	67.353	78.228

All dimensions shown are in inches.

## STEP 3: Final Roof Curb Assembly for Model ERW-E

### Hardware Required:


(4) Screws, SMS (A) 12 x 0.625 (IHH)

(2) Insulation Pans

(1) Duct Adaptor

### NOTE

All curbs shipped for ERW-E units will include a duct adaptor regardless of ducting arrangement.

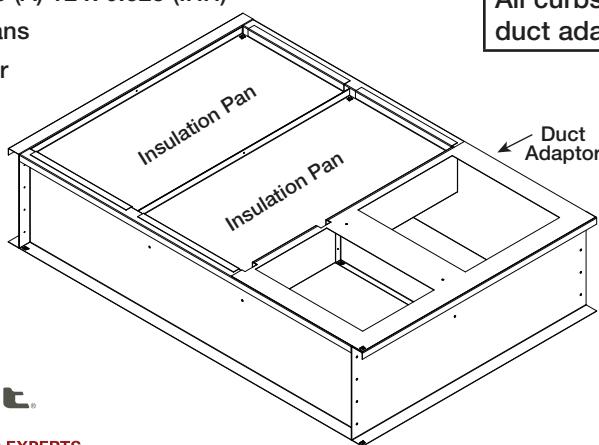

OUTDOOR AIR EXPERTS  
ROBUST DESIGNS  
DEDICATED SUPPORT

valentair.com

© 2023 Valent

Continuous product improvement is a policy of Valent; therefore, product functionality and specifications are subject to change without notice.

For the most recent product information visit the product website.

ERW-E Manual  
Roof Curb and Duct Adapter Assembly  
Part number: 486436  
Rev. 1  
November 2023